

Be at the Right Time at the Right Place

with Socratec Telematic Solutions

The security solution
with various monitoring and
alarming options based on GPS

SocraSecure GPS-based Telematic System FleetView XLT



Socratec

GPS-based Telematic System FleetView XLT

Be flexible in order to monitor and secure vehicles, construction machines and transport processes. Prevent fuel theft, monitor cooling temperatures, machines parameters and protect your freight electronically against theft



Features

GPS-Positioning (including logbook and history)

Theft alarm

Maintenance management

Operating hours by geofences (based on adress manager) in order to e.g. post calculation

Fuel consumption

Fuel consumption (for vehicles without FMS-interface)

Theft prevention of fuel

Theft prevention by monitoring the fuel tank level: Alarming of fuel theft after shutdown of the machine without additional level sensor or

Fuel level measurement in case of missing level sensor on the vehicle

Elektronic lock: remote lockable for trailer- and container loading doors, massive bolt

Driver/codriver registration to gather working hours (driving times, breaks) by geofences/construction sites (based on an adress manager) for post calculation, Driver specific fuel consumption

Monitoring and alarming in case of door opening

Temperature monitoring:

Tachodownload:

Group function

4 digital inputs, 4 digital outputs, 4 analogue inputs

Power supply input: 10-30 V

Auxiliary Equipment:

CAN-FMS-bus software licence

Fuel counter device

Surveillance of fuel filler cap

Tank fuel level measuring electronic

Tank level sensor


Electronic lock

I-button

Proximity switch, magnet switch

Temperature sensors

Auxiliary box for all tachos

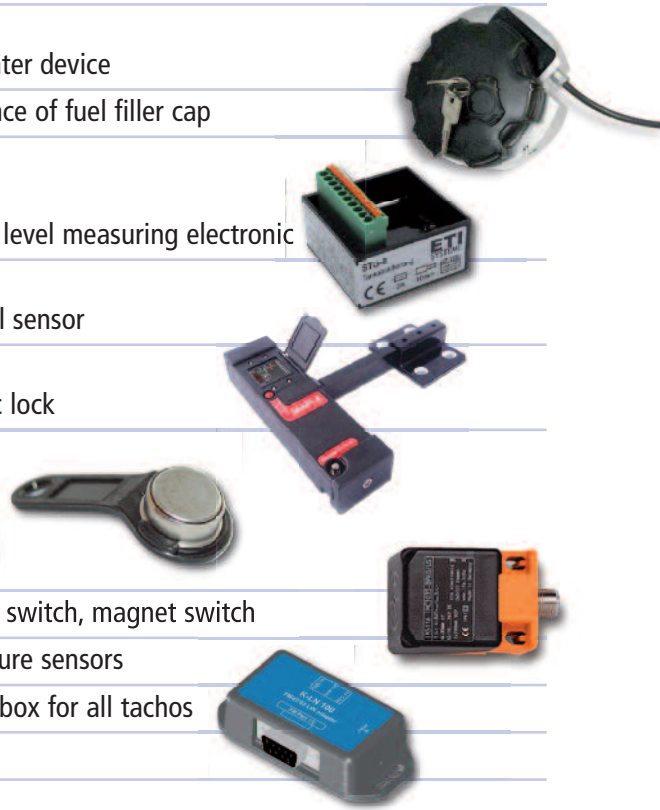

Dimensions

FleetView XMT
88 x 100 x 40 mm

Socratec Telematic GmbH
Jakobsweg 18
64625 Bensheim
Germany
Tel. +49 6251 8540-972
Fax +49 6251 8540-973
info@socratec.de
www.socratec.de

